





Soluna (Shanghai) Co.,Ltd

P7 Rack Assembly Manual




(Soluna 10K HV&15K HV Use Only)

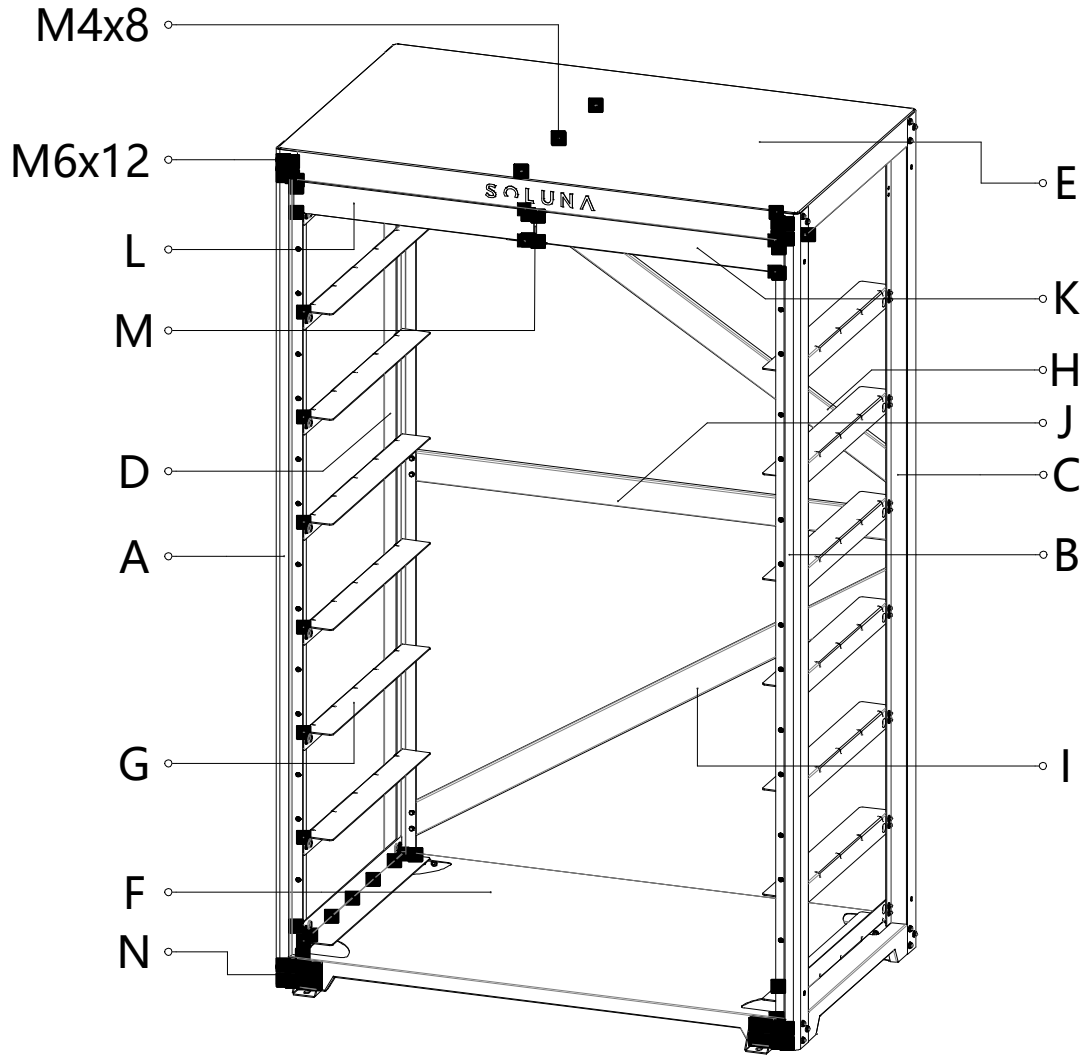

- | | | | |
|----------|-----------|-----------|----------------|
| ◆ A-1PCS | ◆ E-1PCS | ◆ I-16PCS | ◆ M-1PCS |
| ◆ B-1PCS | ◆ F-1PCS | ◆ J-1PCS | ◆ N-4PCS |
| ◆ C-1PCS | ◆ G-15PCS | ◆ K-1PCS | ◆ M6x12 150PCS |
| ◆ D-1PCS | ◆ H-1PCS | ◆ L-4PCS | ◆ M4x8 3PCS |

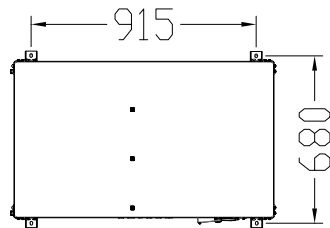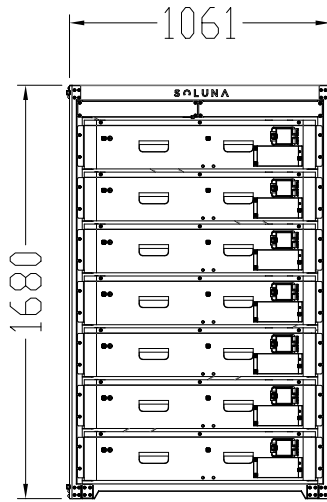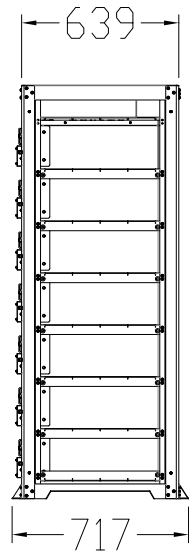

10K

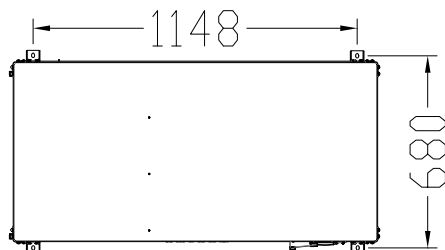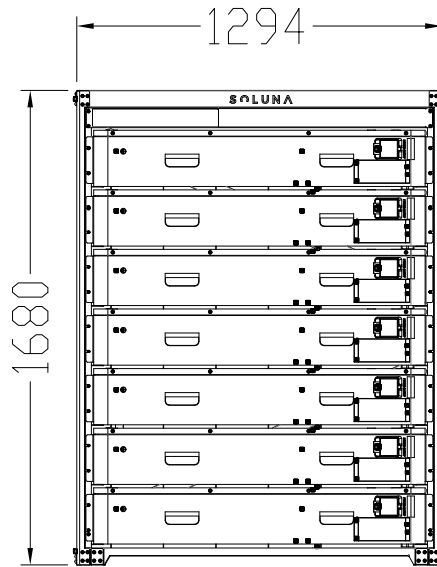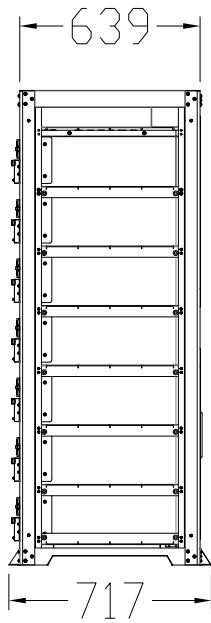

15K

1

D
1 PCS


A
1 PCS


C
1 PCS

B
1 PCS


F
1 PCS

M6×12
7N●m±10%
26 PCS

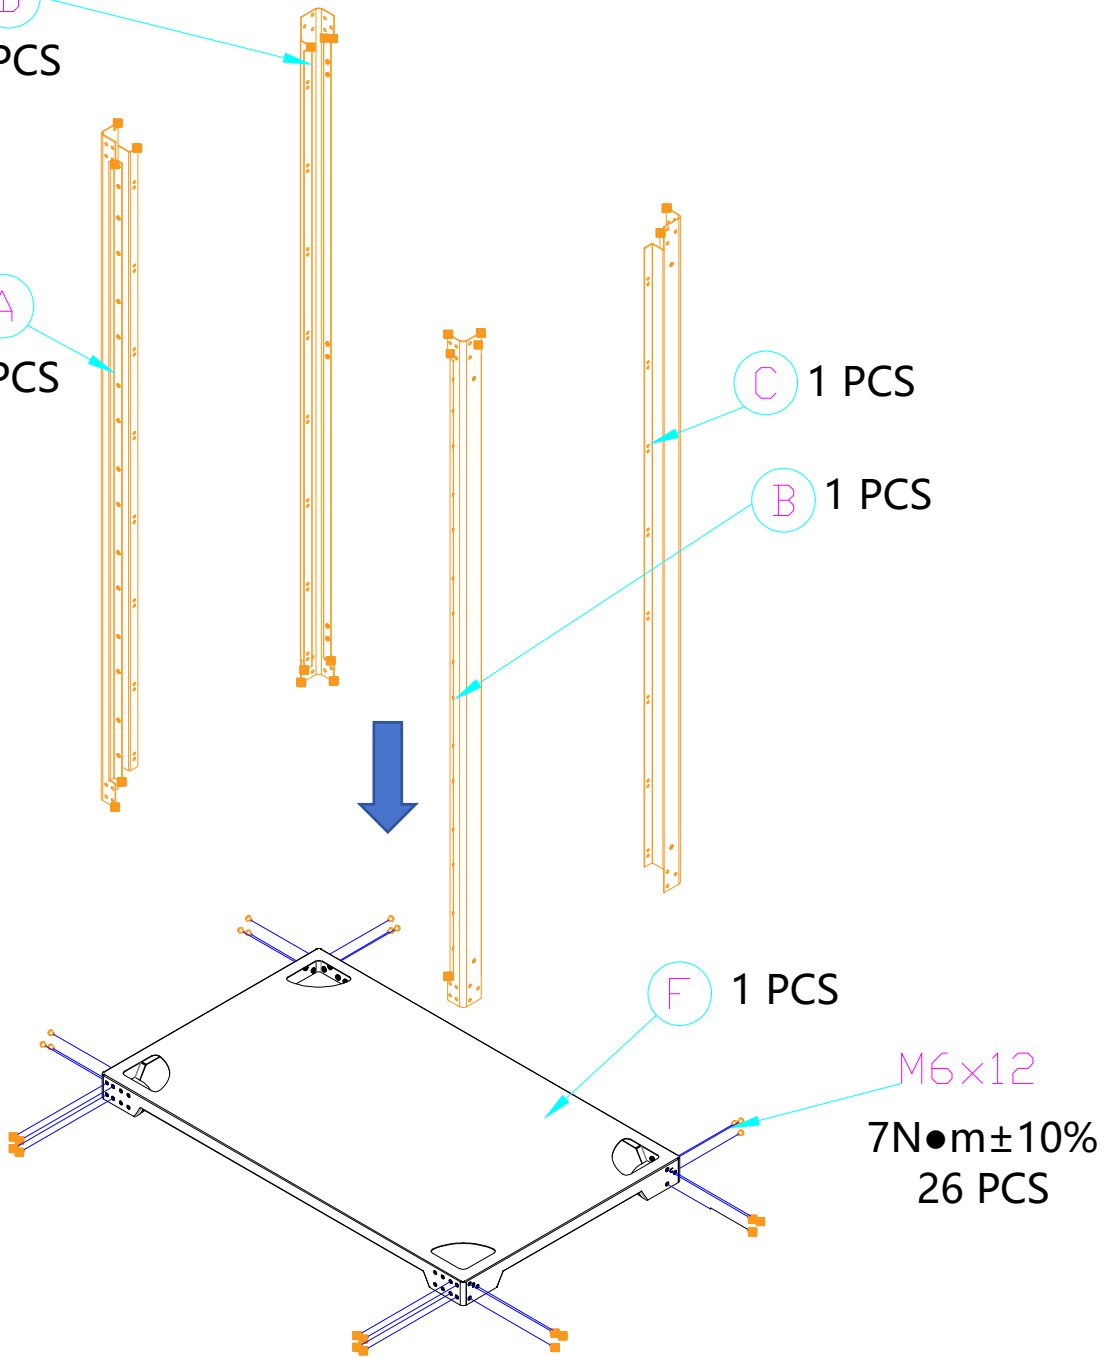


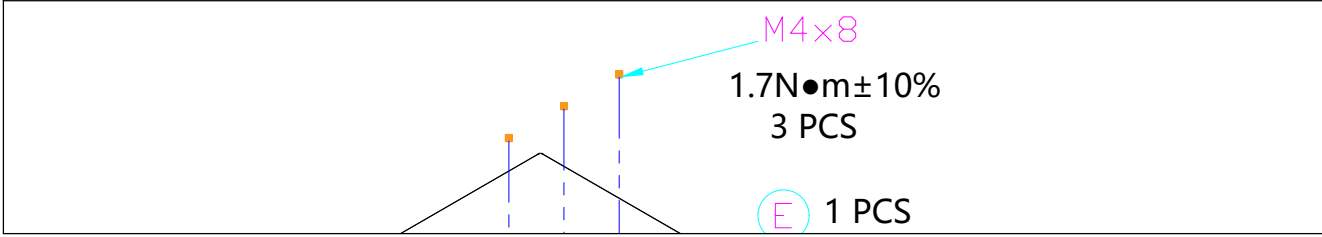

2

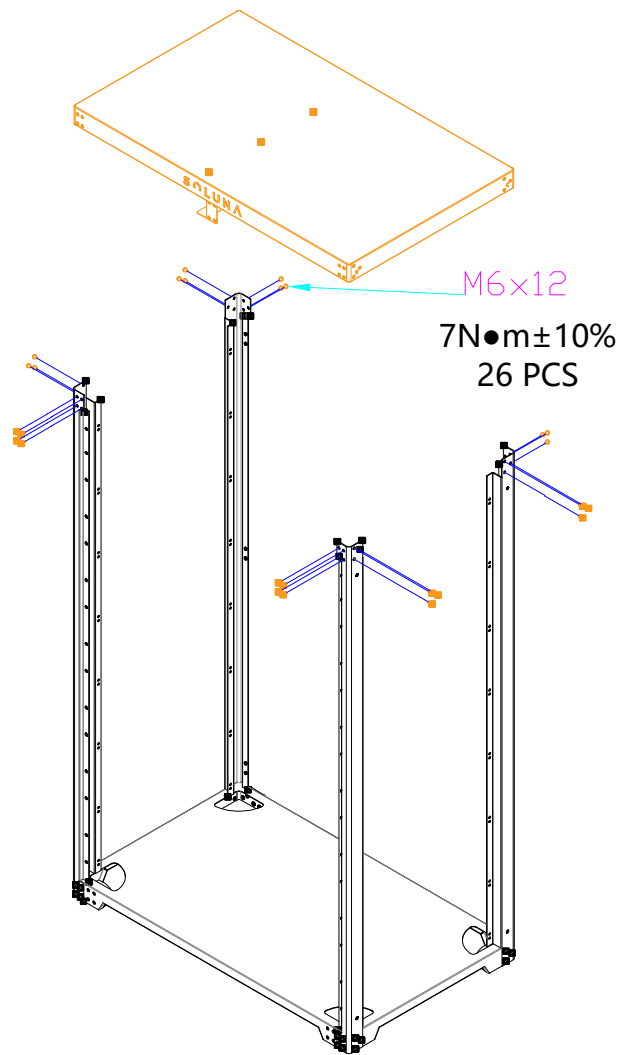

3

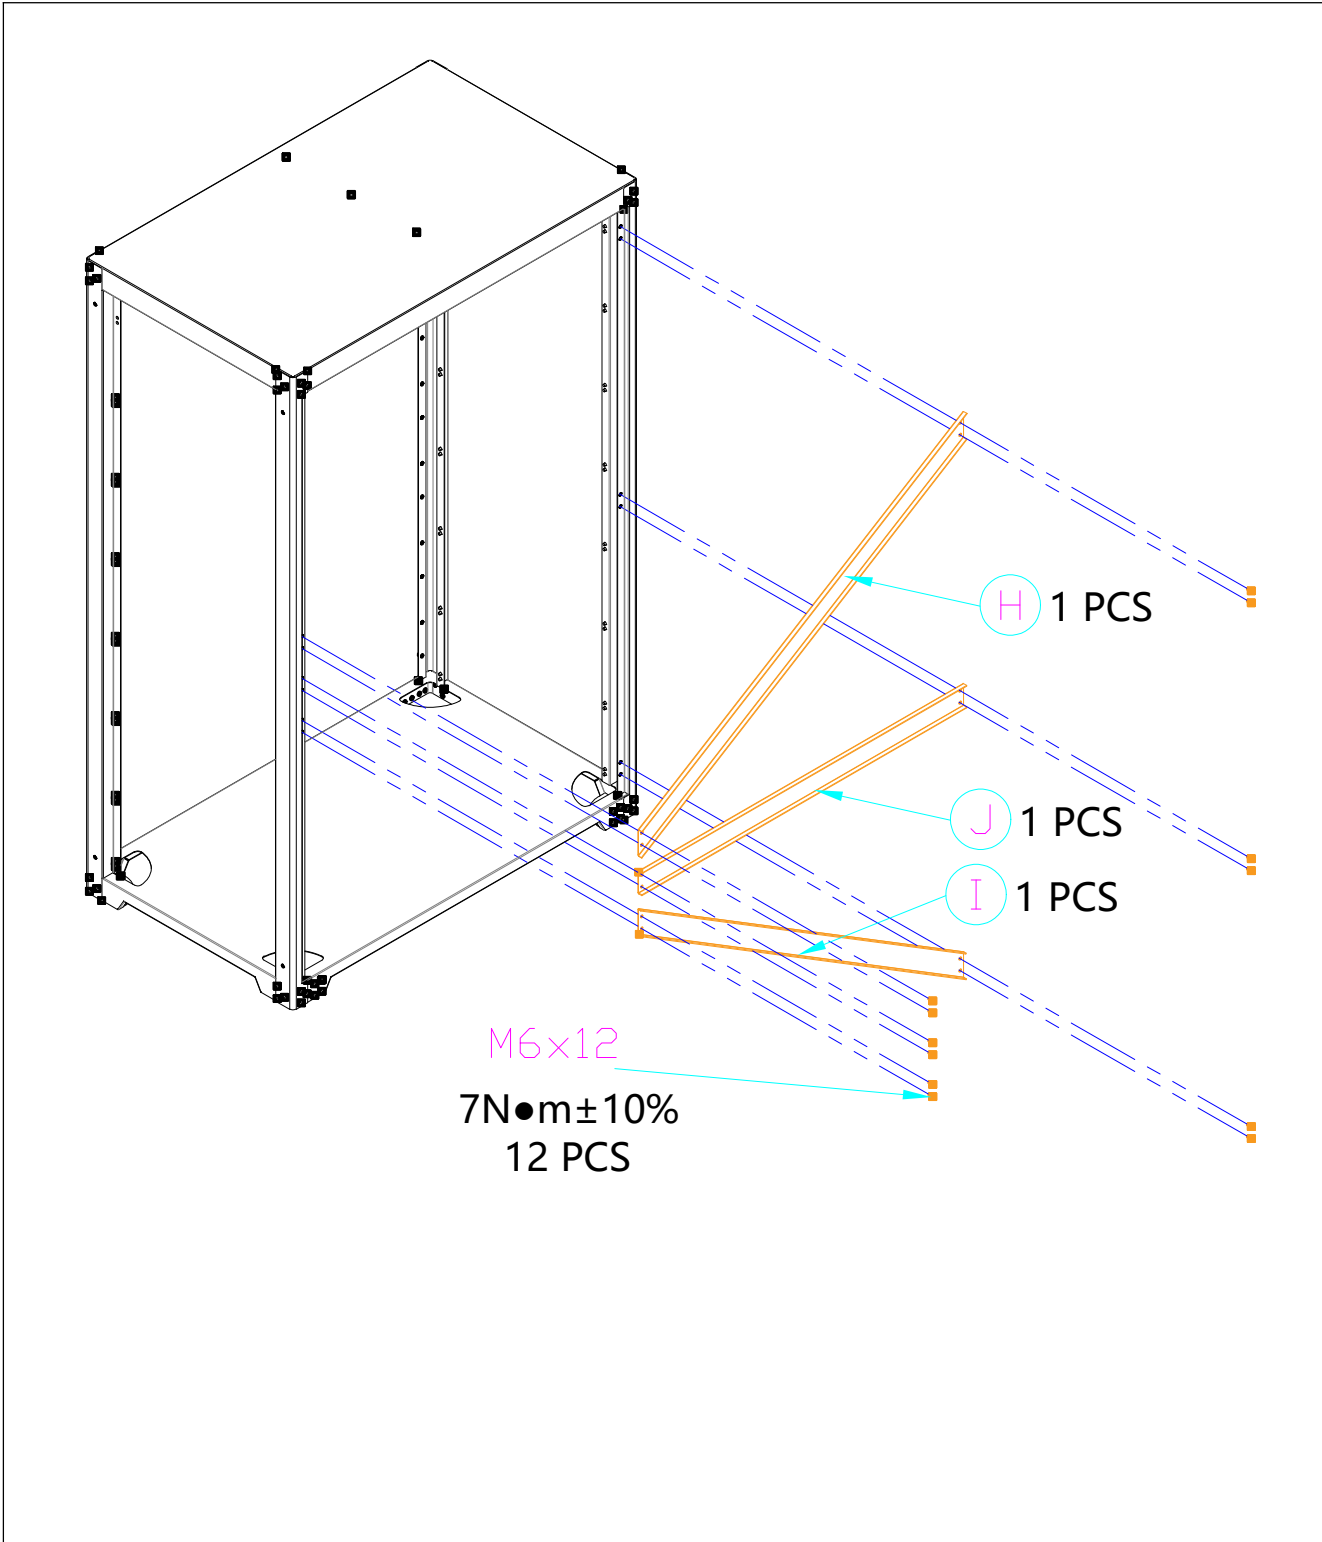


4


M6x12

7N•m±10%
60 PCS


G 16 PCS

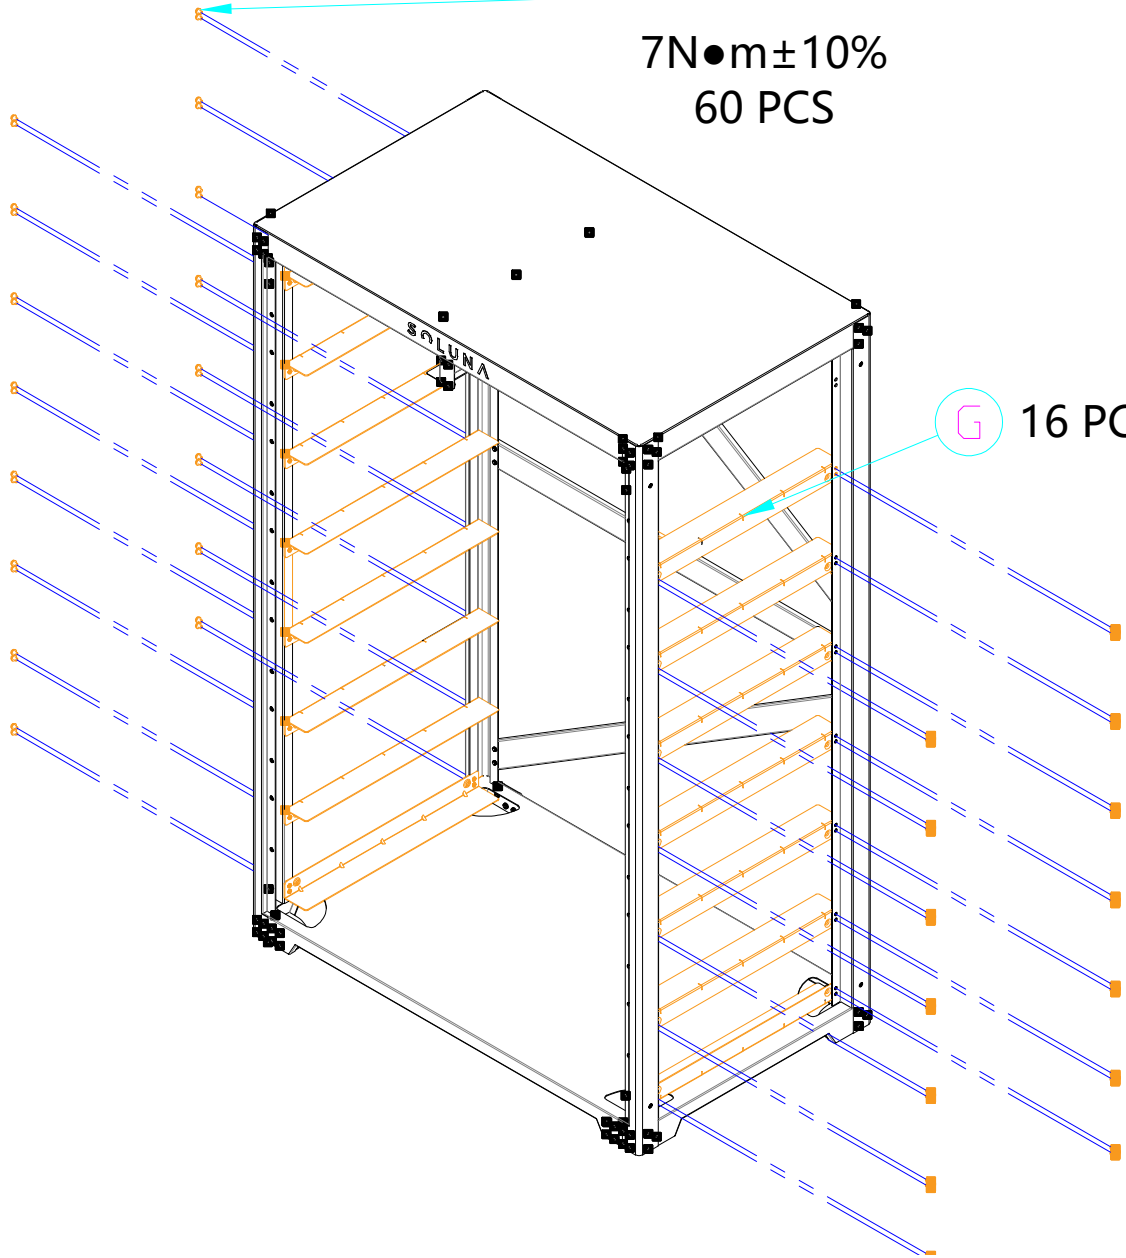

5

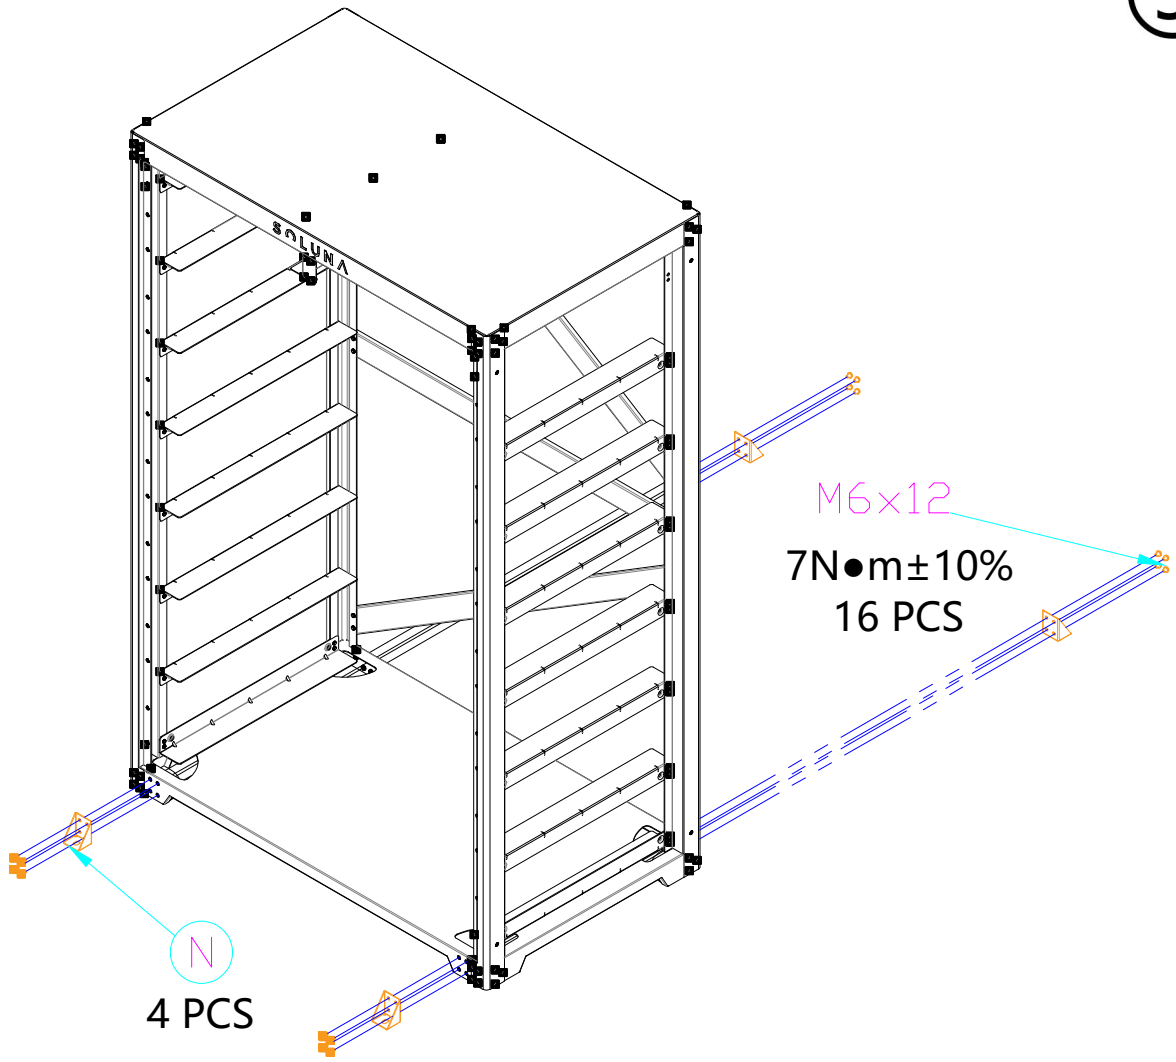

6

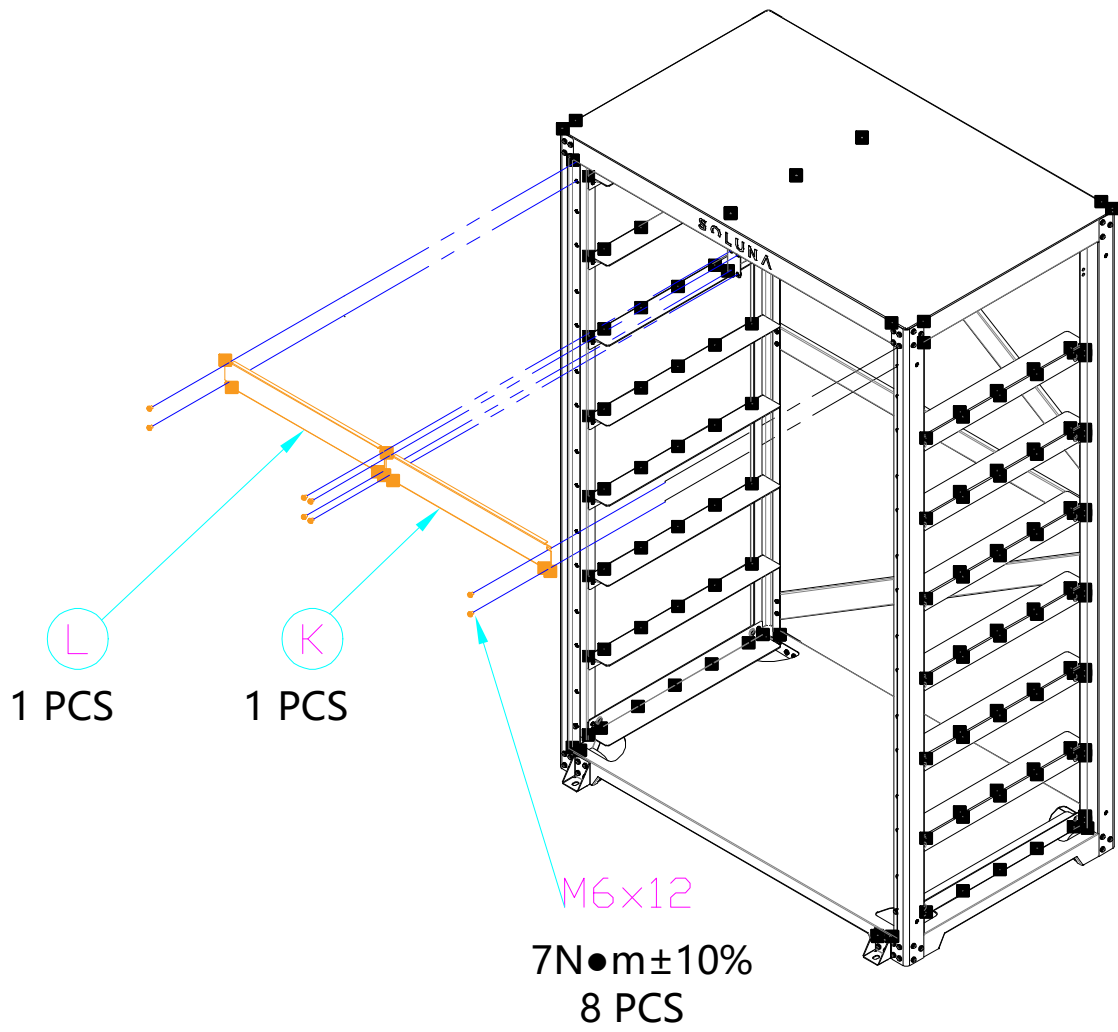

7

